FASTMOUNT.com
PANEL MOUNTING SYSTEMS

Setting the standard for panel mounting

INSTALLATION GUIDE

PC-SF1 Surface Mount Female

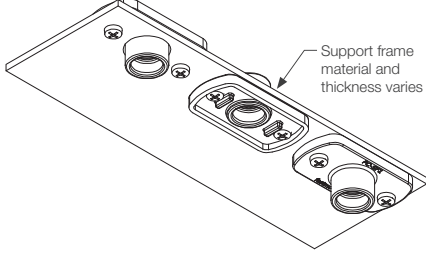| PC-SF1	USE WITH:	INSTALL WITH:
	PC-M1B PC-VM1 PC-SM2	Screw or rivet
	PC-M2H PC-VMX PC-SM2H PC-SM1AC	

INSTALLATION STEP OPTIONS
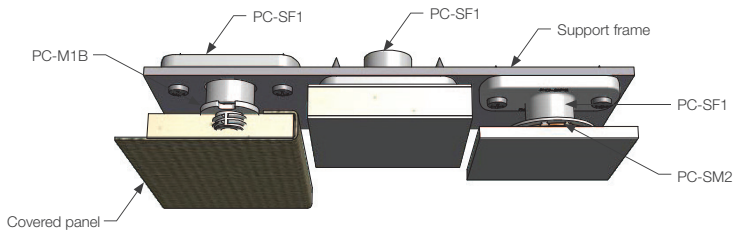
1 Screw fix PC-SF1 to frame

2 x #6 self tapping
SS screw

2 Options for mounting PC-SF1 to support frame

Support frame
material and
thickness varies

3 Options for mounting PC-SF1 to support frame and male clip and panel types

PC-M1B

PC-SF1

PC-SF1

Support frame

PC-SF1

PC-SM2

Covered panel

MORE INFO: Clip Layout Guide TD-02

PC-SF1 Surface Mount Female

PC-SF1	USE WITH:			INSTALL WITH:		
	PC-M1B	PC-VM1	PC-SM2	CP-01ST	CT-09	CT-10
	PC-M2H	PC-VMX	PC-SM2H	PC-SM1AC		

INSTALLATION STEPS

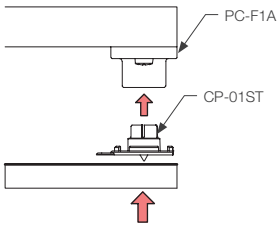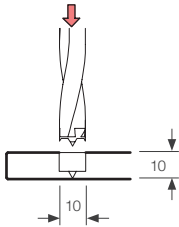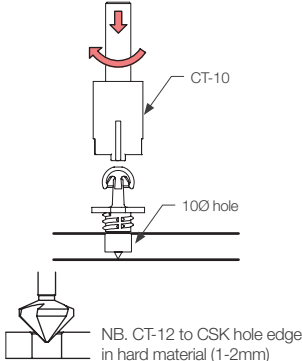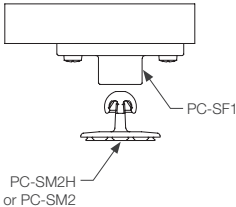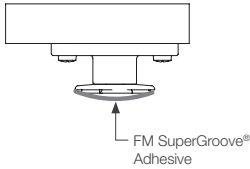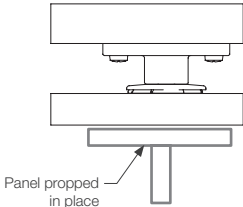**1** Fit CP-01ST into PC-SF1 then push panel to mark center

PC-F1A
CP-01ST

2 Drill panel on center mark with CT-09 7.5mm deep

10
10

3 Screw fit male clip with CT-10. Use battery drill with clutch set.

CT-10
10Ø hole

NB. CT-12 to CSK hole edge in hard material (1-2mm)

INSTALLING ADHESIVE FIT MALE CLIPS (FIRST COMPLETE STEPS 1 , PAGE 1)

4 Clip PC-SM2 into PC-SF1

PC-SF1
PC-SM2H or PC-SM2

5 Apply adhesive to PC-SM2

FM SuperGroove® Adhesive

6 Place panel and support while adhesive dries

Panel propped in place

MORE INFO: Clip Layout Guide TD-02